


TEST INSTRUCTIONS DOCUMENT CTP / CARD READER

testing process:

1. Find out the telephone number using the ICCID and the phonenumber generator via the FleetBoard portal.

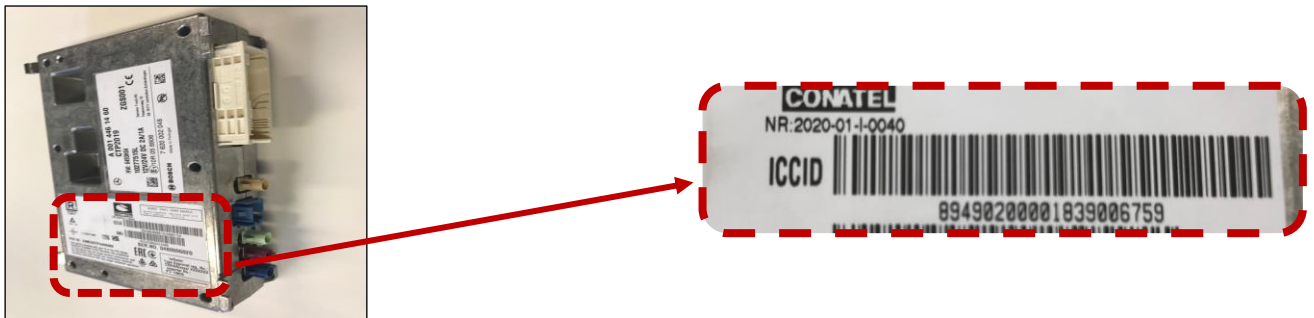

Link „phonenumber generator“ : ICCID - Request (fleetboard.com)

ICCID REQUEST FOR WORKSHOPS


<input type="text" value="89490200001839006759"/>	<input type="button" value="SEARCH"/>	THE MOBILENUMBER IS	<input type="text"/>
---	---------------------------------------	---------------------	----------------------

2. Switch on ignition

Send test SMS #TEST# to the number of the CTP.

(Test answer should be within 2 minutes)

example:

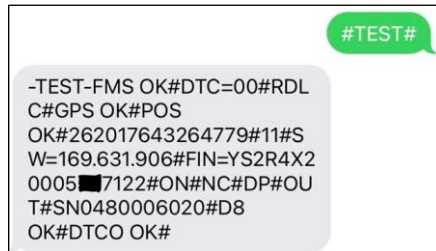

3. Evaluate test response:

target state	error condition
FMS OK CAN connection detected	FMS NOK CAN connection not recognized
RDL C Remote download detected via connector "C".	RDL NOK Remote download via connector "C" not recognized
GPS OK#POS OK GPS/GSM connection is available	GPS NOK / POS NOK GPS/GSM connection is not available
SW=169.631.906# = SW from the Vehicle computer "CTP"	
FIN= XXXXXXXXXXXX123456 correct chassis number must be present	wrong or no chassis number in the test
ON = Ignition is on	OFF = Ignition is off
SN0230018199# = Serial number from the vehicle computer "CTP"	
D8 OK Driver detection signal is available	D8 NOK Driver detection signal is not available
DTCO OK Digital tachograph is recognized	DTCO NOK Digital tachograph is not recognized

If the test does not correspond to the target state, workshop support can be contacted for assistance.

Contact information for Fleetboard workshop support

reachability:

Monday to Friday: 09:00 to 17:00

Saturday 8:00 a.m. to 1:00 p.m

Telephone: +49 (0) 7271 98 18 18